

EELL-LINKLITE

2 YEAR WARRANTY



USER MANUAL

# INTRODUCTION

#### **CELL-LINK SPYPOINT**

### **CELL-LINK PRESENTATION**

The CELL-LINK allows you to connect all your trail cameras (all brands, cellular and non-cellular, with a standard SD card reader) to SPYPOINT's servers.

It is a cellular module whose extension (cable) connects to the camera through the SD card slot. It receives the photos saved by the camera and then processes and transfers them via the cellular network to the SPYPOINT's servers.

Thanks to the CELL-LINK and the free SPYPOINT app (for Android and iOS), you will be able to:

- · Remotely view photos taken by your device. You don't have to visit your hunting grounds;
- Program your CELL-LINK and check its status on your smartphone, tablet, or computer;
- Benefit from many of the advantages of the SPYPOINT experience (described below this document).

### THANK YOU FOR CHOOSING A SPYPOINT PRODUCT

This User Manual will introduce you to the features of your new CELL-LINK and will guide you through the acquisition of its functionalities so that you can use it to its full potential.

Our priority is to offer an outstanding service to our customers. If you need technical support for your device here is how to contact us:

Contact our chat service Monday to Friday, from 8:30 a.m. to 4:30 p.m., directly on the SPYPOINT site (in the lower right-hand corner of the Support section, by clicking on the "Chat with an expert" window, www.spypoint.com).

Go to www.spypoint.com/en/support for more information about our devices.

### **ABOUT US**

SPYPOINT's mission is to offer you products that are easy to use, innovative, affordable, and of exceptional quality. Our products are mainly used in the hunting field and residential and commercial safety fields. They are distributed and appreciated on all continents and are continuously growing. Prosperous and respected, SPYPOINT is a company that is constantly developing new technologies and that remains attentive to its customer's needs to offer cutting-edge products with concrete solutions to improve hunting and outdoor activities.

### JOIN THE SPYPOINT COMMUNITY



www.facebook.com/SPYPOINT



www.twitter.com/SPYPOINTcamera



www.youtube.com/SPYPOINTtrailcam



www.instagram.com/spypointcamera

# TABLE OF CONTENT

## SPYPOINT CELL-LINK



Components	4
Features	6
Power Supply	7
Memory Card	8
Preparation	9
Activation	10
Starting Your Device	11
Installation	13
Configuration	15
Verification	16
Tool – Accessories – Options	17
Transferring Files to a Computer	
Offered Accessories	19
Troubleshooting	20
Warranty and Preparation	22
Regulation	23
Frequency	24

# COMPONENTS



- 1 Cable with SD adapter (#CL-CBL)
- 2 Slot for mounting strap
- 3 Cable lock hole
- 4 SIGNAL lights (5)
- 5 SIM card slot
- 6 Latch to hold/release the battery compartment

- 7 Battery compartment
- 8 AA battery holder
- 9 STATUS light
- 0 ON/OFF switch
- MicroSD card slot
- Screw-thread for standard ¼"-20 tripod mount

- 1 Antenna
- Port for cable with SD adapter
- (15) 12 V jack
- 10 Locking latch

## COMPONENTS

the other.

### **CELL-LINK SPYPOINT**



### SLOT FOR MOUNTING STRAP

**CABLE WITH SD ADAPTER (#CL-CBL)** 

Allows the device to be installed using the included installation strap.

Links the CELL-LINK to your camera to allow file transfer from one to

#### **CABLE LOCK HOLE**

Allows you to install a #CLM-6FT padlock cable to secure the unit (sold separately).



5

6

#### **SIGNAL LIGHTS (5)**

During the installation, these 5 lights indicate to the user the strength of the cellular signal.

#### SIM CARD SLOT

Space to insert a SIM card. It is necessary to activate cellular functions. The SIM card, pre-installed and pre-activated, is included with the device. It is important to use a SPYPOINT SIM card (supplied by SPYPOINT), otherwise the cellular functions of the device will be inoperative.

### LATCH TO HOLD/RELEASE THE BATTERY COMPARTMENT

Holds the battery compartment in place when inserted. Slide the latch and hold it in the open position to remove the battery compartment.

#### **BATTERY COMPARTMENT**

Space to insert the battery holder.

### **AA BATTERY HOLDER**

Removable device in which the 8 AA batteries are inserted (not included with the device).

#### **STATUT LIGHT**



8

During installation, it flashes to indicate to the user the strength of the cellular signal. During regular operation, it indicates that the device is recording or transferring files.

#### **ON/OFF SWITCH** 10

Allows the user to turn the device ON/OFF.



**MICROSD CARD SLOT** Space to insert the microSD card (not included) needed to save photos.



14

#### SCREW-THREAD FOR STANDARD 1/4"-20 TRIPOD MOUNT Allows you to attach a standard tripod from 1/4"-20.



### **ANTENNA**

Captures the cellular signal.

#### PORT FOR CABLE WITH SD ADAPTER

Allows you to connect and secure the cable with SD adapter (the end of the cable ends in a mini USB port).



#### **12 V JACK**

Allows you to insert a power cord connected to an external 12 V source.

#### LOCKING LATCH

Allows you to lock and open the door.

# FEATURES

## SPYPOINT CELL-LINK

CELLULAR TRANSMISSION	
Frequency	LTE
Photo transmission	Transmission of your photos to your SPYPOINT application by cellular network.
	Visit <b>www.spypoint.com/plans</b> to choose a plan that suits you.
PHOTO RECORDING	
	Refer to the camera.
Photo resolution	<b>Note</b> : The photo is kept in its original size on the microSD card of the CELL-LINK.
Photo file format	JPG
Added information (only on the picture)	CELL-LINK by SPYPOINT
VIDEO RECORDING	
Video file format	Does not transfer video.
Added information to the video	None
Sending a photo preview of the video	The camera must be set up to take and transfer a photo of the video

to the CELL-LINK.

None

MEMORY

Internal memory

Operating temperature	-30 °C to 50 °C (-22 °F to 122 °F)
Storage temperature	-40 °C to 60 °C (-40 °F to 140 °F)

# **POWER SUPPLY**

## **SELECT A POWER SOURCE**

3 options are available to you:

- 8 lithium or alkaline AA batteries
- 12 V rechargeable battery (#KIT-12V, sold separately)
- 3.7 V rechargeable battery pack (#LIT-10, sold separately)

## NOTE

We recommend using the SPYPOINT #LIT-10 rechargeable lithium battery pack, sold separately. It provides a long charge time, more than double that of AA batteries.

## FOR BEST RESULTS AND NO LEAKAGE

- Use only new alkaline or lithium batteries.
- Do not mix new and old batteries.
- Do not use rechargeable AA batteries (their lower voltage can generate operational issues).

## HOW TO INSTALL AA BATTERIES PROPERLY

- Unlock and open the CELL-LINK door.
- Eject the battery holder by pushing the latch (1) forward and pressing down on the battery holder (2). The battery holder will be unlocked and you will be able to remove it.
- Insert 8 AA batteries following the (+) and (-) polarity indicators.
- Place the battery holder back into the battery compartment, an audible click should be heard.



## AN EXTERNAL 12 V BATTERY

- The device was designed to recognize and use an optional power source other than the 8 AA batteries.
- You can purchase a 12 V cable and battery kit (like the #KIT12V, sold separately). Simply plug the 12 V cable into the 12 V jack of the device and connect the other cable end to the 12 V battery.



## MANAGING VARIOUS DEVICE POWER SUPPLY

If you choose to plug an external 12 V battery (#KIT-12V, sold separately) into your device, it becomes your device's new primary power source. The AA batteries will only be used once the 12 V battery is depleted.

### You can check the battery level of your device:

- In the application: on the home page, you will see the battery charge level for each of your devices. You can access more details on the STATUS of your battery by going to the STATUS page. When the battery logo turns red, we suggest that you change the batteries before it is completely drained.
- On the device: as soon as the device is switched on, when the STATUS light flashes orange, it indicates that the battery level is low.

## MEMORY CARD

## **INSTALLING A MICROSD CARD (NOT INCLUDED)**

A memory card is necessary to save the photos and videos that the camera transmits to the CELL-LINK. When your camera is connected to the CELL-LINK, the photos and videos taken by the camera will be saved in their original format (defined by your camera) on the microSD card of the CELL-LINK. Your precious files are therefore stored on the CELL-LINK's microSD card. At any time, you can directly retrieve them by removing the SD card and transferring the content to another device.

Your device requires a memory card type microSD, with a maximum capacity of 32 GB, sold separately. Here is a table showing the approximate quantity of photos that can be recorded on the card, according to different memory card capacities.

MEMORY	4 GB	8 GB	16 GB	32 GB
PHOTOS 10 MPX	1 600	3 200	6 300	12 600

## **INSERTING YOUR MICROSD CARD**

Before inserting the microSD card into your device, it must be formatted via a computer to ensure proper operations. Visit **www.spypoint.com/en/support** if you need help formatting your microSD card.

- Open the CELL-LINK battery compartment door.
- Make sure the device is turned OFF.
- Insert the microSD card in the slot for microSD cards, the metal contacts facing the bottom (as shown).
- The card is inserted correctly when a click is heard.

## **REMOVING YOUR MICROSD CARD**

- Before removing a memory card, always turn your device OFF to prevent files from on the card from being deleted or damaged.
- To remove the card, push it lightly into the device until you hear a click. Then take it out of the device.



### NOTE

The CELL-LINK is equipped with continuous file recording. This means that when the memory card is full, the device continues to save your pictures by erasing the first recorded files.

# PREPARATION

## ATTACH THE ANTENNA

When buying the CELL-LINK, the antenna comes in the box and is detached from the device. To attach it, follow the next steps:

- 1. Remove the cap which covers the antenna connector of the CELL-LINK.
- 2. Screw the antenna in the connector by turning it clockwise.







## **ACTIVATING YOUR CELL-LINK**

You have to activate your CELL-LINK before you can use it. To do so, you will need the activation code.

### FINDING THE ACTIVATION CODE

The activation code is located inside the CELL-LINK's battery compartment door.



Activation code

# SPYPOINT CELL-LINK

# ACTIVATION

To activate your device, you have two choices: you can either do it via the **SPYPOINT app** or via our website **www.spypoint.com**.

## **SPYPOINT APPLICATION**

### If you choose to use the SPYPOINT app to activate your device, follow these steps:

- 1. On Google Play<sup>™</sup> or the App Store<sup>™</sup>, search for "**SPYPOINT app**".
- 2. Download and install the app on your smartphone or tablet.
- 3. Start the app. Select "ACTIVATE A DEVICE". In the list, select "CELL-LINK" then follow the steps to create an account.
- 4. Once completed, a confirmation email with instructions on how to finalize the creation of your account will be sent to you.
- 5. Log in to the **SPYPOINT** app using your email address and password.

## SPYPOINT.COM WEBSITE

## If you choose to use the SPYPOINT website to activate your device, follow these steps:

- 1. On the **www.spypoint.com**, select "**LOGIN**" in the top navigation menu. On the displayed "**SPYPOINT**" page, select "**REGISTER**", fill out the required fields, then log in.
- 2. Select the + sign on the far right of the page; in the list, select "**CELL-LINK**" then follow the steps.
- 3. When complete, a confirmation email with instructions on how to finalize the creation of your account will be sent to you.
- 4. On the **SPYPOINT** website, log in to your account using your email address and password.

## **CHOOSING A PHOTO TRANSMISSION PLAN FOR YOUR DEVICE**

Go to **www.spypoint.com/en/spypoint-experience/plans** to read the latest offers and choose the plan that suits you.





## **STARTING YOUR DEVICE**

## SPYPOINT CELL-LINK

## **CONFIGURING YOUR CELL-LINK**

The CELL-LINK is designed to add cellular functionality to a camera (all brands). Therefore, it can't be used on its own. It must be connected to a camera with a standard SD card slot, using the cable with SD adapter, included with the CELL-LINK.

### NOTE

Before starting the CELL-LINK, make sure you have successfully configured your trail camera according to your preferences and that you have done this by following your camera's User Manual.

### **CONFIGURATION: MAIN SETTINGS**

Here are the recommended camera settings to ensure the optimal performance of your CELL-LINK:

- A low-resolution photo format.
- Precisely adjust the date and time.
- A delay no shorter than 1 minute between each detection.
- In Time-lapse mode, a delay no shorter than 1 minute.

### NOTE

The CELL-LINK supports photos up to 25 Mpx resolution. However, be aware that "higher megapixels" imply larger file formats and therefore:

- More power consumption of your batteries;
- · Less camera speed;
- More recovery time between shots;
- More used memory space on your SD card.

Therefore, we recommend that you choose a low-resolution operating mode for your camera.

Cellular transfer functionality of videos is not supported by the CELL-LINK. However, if you configure your camera to take a picture before each of your videos, this picture will be transmitted to you via the CELL-LINK.

## **STARTING YOUR CELL-LINK**

### **BEFORE TURNING YOUR DEVICE ON**

Refer to the image below to familiarize yourself with the meaning of the STATUS and SIGNAL LEDS. These light indicators will guide you along the startup process.

SIGNAL	STATUS		ON/OFF
		-	Micro SD

- 1. Make sure that your device is powered by new batteries and that a microSD card has been inserted.
- 2. Open the battery door of the CELL-LINK.
- 3. Turn the power ON by sliding the power switch to the ON position.
- 4. Follow the table on the next page to fully understand the meaning of these light indicators.

# **STARTING YOUR DEVICE**



## NOTE

Inside your device's door is a small checklist to guide you through the different steps to start your device.

STARTING THE CELL-LINK		(CONTINUATION)		CELL-LINK IN FONCTION	
1	2	3		4	5
	or		x1 x1 x1 x1 x1 x1 x1 x1 x1 x1		
All the lights turn on for 3 seconds.	2 possibilities: The 1 <sup>st</sup> red signal LED flashes = low batteries. The STATUS light stays on + 5 LED flashing = searching for cellular signal. This can take a few minutes.	2 possibilities as signal search: Only the red LED network issue. The STATUS light X LED are fixed = strength of the si + + + (1-3)	fter the cellular is flashing = is flashing and indicates the gnal. Good to excellent signal Weak signal Insufficient signal 30 s, after which operational.	All lights turn off.	While the CELL-LINK is in function, the STATUS light is turned on and fixed.

# INSTALLATION

## SPYPOINT CELL-LINK



## INSTALLING AND CONNECTING THE CELL-LINK

To connect the SPYPOINT CELL-LINK to your trail camera from any brand, follow these steps.

We recommend that you watch our video which will guide you through the different installation steps. Go to **www.spypoint.com/en/support.** 

- 1. Open your camera door.
- 2. Take the cable with SD adapter and insert the SD card extremity (#CL-CBL) in the corresponding slot.
- 3. Pull the cable with SD adapter down and hold it against the camera. We suggest that you make at least one loop with the cable and place it inside the camera housing. This way, the SD card will not be disconnected if the cable is pulled (when you close the camera door, for example). The cable should therefore hang freely on the outside of the camera. **Important**: Avoid running the cable in front of the lenses or other essential components.
- 4. Shut the camera door and lock the latch.





- 5. Run the cable behind the camera and upwards so that the end of the cable sticks out of the top of the camera, so that you can connect it to the CELL-LINK.
- 6. Mount your camera to the tree (the cable with SD adapter should now be placed between the tree and the camera.)





- 7. Mount the CELL-LINK above the camera so that it sits closely to the extemity of the cable with SD adapter.
- 8. Plug the extremity of the cable with SD adapter to the CELL-LINK and screw it on tightly.

You can now access CELL-LINK photos, configurations, and statuses either via the SPYPOINT app or the SPYPOINT website.





# INSTALLATION

## NOTE

We strongly recommend that you mount your CELL-LINK directly above your camera leaving as little space as possible between the two. Doing so will reduce the risk of having animals damage the cable.

If your cable with SD adapter (#CL-CBL) is damaged, you can order a replacement directly via our website **www.spypoint.com**.

### **OPERATING VALIDATION TEST**

### Run a test to make sure everything works properly.

- Make a movement in front of your camera so that it takes a photo.
- The STATUS LED should turn green, indicating that the CELL-LINK is communicating with the cellular network.
- Wait 15 minutes at most and you should then be able to view the photo in the SPYPOINT app.



## CONFIGURATION

### Use the SPYPOINT app to configure your device.

<b>FIRST TRANSFER TIME</b> All possible combinations	Allows you to choose the time when the device makes its first transfer of the day. <b>Note</b> : the device transfers are configured by default with 4-hour intervals, determined from the time you activated your device. For example, if your device was activated at 1:42 p.m., the next transfer will be at 5:42 p.m.
<b>TRANSFER FREQUENCY</b> 1; 2; 6; 12; each detection	Allows you to choose the number of transfers the device performs each day.
<b>DEVICE NAME</b> All possible values	Allows you to name the device for easy identification. This function is very useful for users with more than one device.
DATE FORMAT MM/DD/YYYY or DD/MM/YYYY	Allows you to choose the date format displayed.
<b>TIME FORMAT</b> 12 h or 24 h	Allows you to choose the time format displayed.
<b>TEMPERATURE UNIT</b> °C/°F	Allows you to choose the temperature unit format displayed.
REPORTED STOLEN ON/OFF	Report the device as stolen.
BUCK TRACKER ON/OFF	Activate the BUCK TRACKER.
BATTERY TYPE AA/AA-LIT/12 V/LIT-10	Allows you to select the correct type of battery used to ensure a more accurate reading of the battery charge level.
<b>RESET TO DEFAULT SETTINGS</b> Activated/not activated	Allows you to reset the device to its original state.

# VERIFICATION

## **VERIFYING DEVICE STATUS**

Different tools are available to help you check the status of your CELL-LINK and to inform you of any problems that may occur during its operation. In this section, we will see **3 tools**:

## **NOTIFICATIONS**

The device was designed to send notifications to your SPYPOINT app. This is to help you stay informed of the status of your device.

## You will receive a notification on your smartphone for the next transfer when:

- You forget to insert a microSD card in your device.
- The inserted microSD card is not compatible with your device.
- The batterie charge is too low.



## **APPLICATION STATUS PAGE**

Here are the different indicators of the CELL-LINK status you have access to. They are accessible on your app or on the SPYPOINT website.

<b>SIGNAL</b> Strength of the cellular signal	1 - 5 bars
BATTERY Charge level	0 - 100% (LIT-10/12 V)
SD CARD Used space	0 - 100%
<b>POSITION</b> GPS	GPS coordinates
MODEL	CELL-LINK
<b>VERSION</b> Displays the software version	VX.XX.XX
<b>LAST COMMUNICATION</b> The date and time of the last device transfer	Date and time
NUMBER OF PHOTOS TAKEN THIS MONTH	XXXX
TEMPERATURE	°C or °F
<b>LAST INSTALLATION</b> Last time your device was turned ON	Date and time
<b>SIM</b> Number on your SIM card	89
ACTIVATION CODE	XXXX-XXX-XXXX

## TOOL - ACCESSORIES - OPTIONS

### **CELL-LINK SPYPOINT**



## SPYPOINT MOBILE APPLICATION



The SPYPOINT app is your hub for managing your devices and photos. You can download it for free from iTunes and Google Play. The app requires no subscription or monthly payment.

#### From the SPYPOINT app, you can:

- Configure your device.
- Manage your settings and account preferences.
- Verify your data usage and adjust your plans.
- Configure your transmission settings.
- · View and sort your photos.

For more information, visit www.spypoint.com/en/experiencespypoint/application-spypoint.

### PHOTO TRANSMISSION PLANS

- 1. When activating your device, you will immediately take advantage of our FREE 30-day package.
- 2. You can keep the FREE monthly plan for life and keep receiving up to 100 photo transfers per month.
- 3. At any time, you can choose a plan that best suits your needs from those we offer.

For more information or to choose one of our plans, visit www.spypoint.com/en/spypoint-experience/plans.

### **ONLINE DEVICE AND PHOTO MANAGER**



## THE SPYPOINT EXPERIENCE

(Online scouting tools)

To make sure you use your trail device in an optimal way, that it precisely meets your needs, and that you have better success as a hunter, SPYPOINT offers you a range of very useful additional digital features.

For more details on the SPYPOINT EXPERIENCE, see the following website: www.spypoint.com/en/experience-spypoint.



As well as with the SPYPOINT app, you can manage your device and photos using the online manager.

Create your user account for FREE!

Go to www.spypoint.com to discover a complete range of complementary features for your device.

## TRANSFERRING FILES TO A COMPUTER

## **SPYPOINT**

### **CELL-LINK**

## TRANSFERRING FILES TO A COMPUTER

- Turn the device OFF.
- Remove the microSD card from the device.
- Insert the microSD card in the microSD computer slot, or use a USB adapter for microSD cards.
- The computer will recognize the microSD card.

## ON A PC

On your desktop, click on "My Computer" or "This PC".

Locate your device under "Removable Disk" and click to access it. Then, click on "DCIM" and "100DSCIM" to find all saved photos.

Select the photos you want to copy. With some Windows versions, the simplest way is to select them by clicking on the "Home" tab and choosing "Select all" on the right side. With some Windows versions, you can press on "Ctrl" and "A" or click on the "Edit" menu and choose "Select all".

Click on the "**Copy**" icon on the left of the ribbon (or hold the "**Ctrl**" and "**C**" keys).

## NOTE

If you do not want to select all photos, hold down the "**Ctrl**" key and click on the photos you want to select before clicking on the "Copy" icon.

Access the folder where you want to save your photos or create a new folder by clicking on the "New folder" button. (You can also click on "Ctrl", "Maj", and "N" to create a new folder, or right-click in a blank space in the "Pictures" folder and choose "New", then, in the following menu, click on "Folder".)

Enter a name for your new folder, click on "Enter", then double-click on the folder to open it. In the "Home" tab, choose "Paste" (or click simultaneously on the "Ctrl" and "V" keys). The photos will be copied in the new folder.

## ON A MAC

Click on the search tool in the "**Toolbar**". Locate your device under the "Devices" tab and click to access it. Then click on "DCIM" and "100DSCIM" to find all saved photos.

Click on "Modify" in the toolbar at the top of the screen, then click on "Select All" to highlight all individual images on the device. You can also access the "Select All" option by simultaneously clicking "Cmd" and "A".

If you don't want to import everything, you can highlight the desired pictures individually. Transfer pictures by clicking on "Cmd" and on the file name. Click on "Edit again" and then "Copy" (or "Cmd" and "C") to copy the highlighted pictures.

Access the folder where you want to save your pictures, or create a new folder by right-clicking and pressing "Cmd" at the same time, then select "New Folder" from the menu.

Click on "**Modify**", then on "**Copy**" (or "**Cmd**" and "**V**") to copy your chosen pictures in the selected folder. The pictures can take a few minutes to download, depending on the size of the file and the number of pictures you are importing.

Once your pictures are transferred, click on the "Eject" icon beside the name of your device, than unplug the device from your MAC.

## **OFFERED ACCESSORIES**

## SPYPOINT CELL-LINK



### 12 V BATTERY, CHARGER & HOUSING KIT

Compatible with all SPYPOINT devices with a 12 V socket. Case, AC charger, 12 ft (3.6 meters) power cable (#PW-12FT) and strap included.

#KIT-12V



### RECHARGEABLE LITHIUM BATTERY PACK

Rechargeable lithium battery pack and charging cable included. 3.7 voltage.

#LIT-10



### **12 V POWER CABLE**

12 feet (3.6 meters) cable with alligator clips to connect to a 12 V device battery.

#CB-12FT







### LONG RANGE CELLULAR ANTENNA

Boosts the cellular signal. 15 feet (4.57 meters) cable. No external power source necessary.

#CA-01

### **CABLE LOCK**

6 feet (4.57 meters) cable lock compatible with all devices and security boxes from SPYPOINT.

#CLM-6FT

### 16 GB MICROSD CARD

Package including a 16 GB microSD card and an adapter. High speed, class 10. 10-year warranty.

#MICRO-SD-16GB

For more information about other available accessories, got to **www.spypoint.com**.

ISSUES	POSSIBLE SOLUTIONS
IMPOSSIBLE TO TURN THE DEVICE ON	<ol> <li>Check if there are batteries in the device.</li> <li>Check if the batteries are installed in the correct orientation at the + and - polarity.</li> <li>Make sure the charge level of the batteries or the lithium battery pack is enough.</li> </ol>
	<b>NOTE</b> : to verify the charge level, go to the STATUS section of your app and verify the battery % displayed. Don't forget that the indicated status is from the last transfer. Also, when turning on the device, if the status light flashes red quickly, it indicates that the battery's charge is low.
	Try the following solutions in order:
	1. Turn the device OFF and ON again.
THE DEVICE IS NO LONGER RESPONDING	2. Remove and reinsert the battery pack in the device.
	3. From the app, reset the device to its original state.
	<ol> <li>Perform the latest update (available on www.spypoint.com under the SUPPORT section).</li> </ol>
	1. Check if your camera is working properly and whether it has taken any photos or videos. Most cameras have a photo-taking indicator.
	2. Make sure the CELL-LINK is turned ON.
	3. Format the microSD card. Do not choose the "Quick format" option.
	4. Check the strength of the cellular signal received by your device.
THE DEVICE DOESN'T TAKE PICTURES	5. Make sure you haven't reached the photo-taking limit included in your cellular plan.
Issue with taking photos	6. Check if there is a message in your app, in the Photos section. You will receive a notification if your CELL-LINK is active, but has not received photos from the camera. Under these conditions, it is normal that your applica- tion does not contain new photos.
	7. Perform the following test: Turn OFF your CELL-LINK. Make a movement in front of your camera so that it takes a photo. Turn your CELL-LINK back ON. This will allow you to check the strength of the cellular signal. The CELL-LINK should normally connect to the cellular network and transmit its status and at least one photo within 15 minutes. This should appear on your application.

ISSUES	POSSIBLE SOLUTIONS
THE DEVICE IS NOT RECEIVING A CELLULAR SIGNAL	<ol> <li>Verify the coverage area of the cellular network to make sure it reaches your area.</li> <li>Move your device to other locations to search for a stronger signal.</li> <li>Turn the device OFF and ON between the attempts.</li> <li>Make sure the antenna is installed properly (securely screwed down).</li> <li>Use the long range cellular antenna #CA-01 (sold separately).</li> </ol>
THE BATTERIES ARE DRAINING FAST	<b>The following configurations of your device affect power consumption:</b> Transfer frequency – photo quality. If possible, choose the less power-consuming options.
THE DEVICE DID NOT TRANSFER ALL THE PHOTOS Taken by the device	Photos older than 7 days are not transferred.

## LIMITED WARRANTY

This SPYPOINT product is covered by a 2-year warranty that also covers parts and workmanship from the purchase date. The electronic cash register receipt is a proof of purchase and must be presented to confirm that the warranty is applicable. This warranty will be honored in the country of the original purchase only.

### THIS SPYPOINT WARRANTY DOESN'T APPLY TO:

- Consumable parts, including but not limited to batteries, the performance of which are designed to decrease over time.
- Damages caused by improper use of the device, use of the device with another product, negligence, accidents, contact with liquid, fires, earthquakes, or any other type of external causes.
- SPYPOINT products bought online from an unauthorized retailer.
- Products that were modified or altered.
- Aesthetic damages, including but not limited to scratches or plastic breakage.
- Damages caused by the usage of a product outside of the SPYPOINT recommendations.

## **INSTRUCTIONS FOR REPAIR SERVICES**

SPYPOINT will repair the product, free of charge, or replace it at its discretion by an equivalent product, if it has a manufacturing defect covered by the warranty described above. Shipping costs to send us a product will have to be assumed by the costumer at all times. SPYPOINT will assume shipping costs only for the return of products under warranty.

Breakage or defect repairs not covered by the warranty will be charged at a reasonable cost. The customer will be responsible for all shipping costs.

#### IMPORTANT

In no circumstances will SPYPOINT accept returns without an RMA number (return merchandise authorization). It is essential to contact SPYPOINT before making a return.

- 1. Before sending a product for repairs, you can get help in many ways. Most problems can be solved over the phone or online:
  - Contact the chat service, Monday to Friday, from 8:30 a.m. to 4:30 p.m., directly on the SPYPOINT website (in the lower right corner of the Support section, by clicking on the "Chat with an expert" window, www.spypoint.com).
  - Contact us by email at the following address: service@spypoint.com
  - Go to www.spypoint.com/en/support for more information about your devices.
- 2. If a product has to be returned, you will be assigned an RMA number to authorize the return of the product and for future reference. Please keep this number with you.
- 3. The original receipt or a copy of the receipt has to be included to in the package prepared for SPYPOINT.
- 4. The RMA number should be written on the outside of the package and it should be sent to:

### CANADA

### UNITED STATES

#### SPYPOINT

330 Jacques-Cartier Street Victoriaville, QC, G6T 1Y3 DISTRIBUTION CENTER

3000 Gannett Avenue Des Moines, Iowa, 50321

The customer is held responsible for any loss or damage that may occur to the product during transport to SPYPOINT. It is recommended to use a shipping method that offers a tracking number. This will help protect your shipment.

# REGULATION

## FCC REGULATION Article 15 of the FCC regulation

This equipment has been tested and found to comply with the limits for a class B digital device, in accordance with article 15 of the Federal Communications Commission (FCC). These limits were designed to offer a reasonable protection against harmful interference to a residential installation. This device generates, uses, and can emit radio frequencies and, if not installed according to the instructions, may cause damage to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device causes harmful interference to TV or radio reception, which you can determine by turning your device off, we invite you to try one of the following corrective measures:

- 1. Reorient the receiving antenna.
- 2. Move the device away from the component receiving waves.
- 3. Plug the device into an AC outlet different from the one the component receiving waves is plugged in.
- 4. If necessary, consult your local electronics store or radio/television service technician for additional suggestions.

All modifications or changes made to this device without the approval of the parties responsible for certification may void the user's authority to use the device. This device complies with article 15 of the FCC regulations. There are two conditions under which this device may be used:

- 1. This device must not cause harmful interference.
- 2. This device must accept any interference received, including interference that may cause undesired operation.

### DISPOSAL

### ONLY USE ORIGINAL SPARE PARTS AND ACCESSORIES.

If, one day, your device has been used so intensively that it has to be replaced, or if you no longer have any use for it, you are obliged to dispose of it at a recycling center.

Information on return points for your electrical appliance can be obtained from your local waste disposal company or from your local administrative offices.

Electrical appliances not only contain valuable recyclable raw materials, but also substances which, if disposed of improperly, can affect public health and the environment. Help ensure that valuable raw materials are recycled by returning your old appliance to a central collection point.

The WEEE (Waste Electrical and Electronic Equipment Directive) symbol represents the obligation for the labeled device to be sent to a separate center for the proper recycling of electrical and electronic equipment.



# FREQUENCY

## FREQUENCY

### FREQUENCY RANGE:

800/850/900/1900/2100 MHz

### MAXIMUM TRANSMISSION POWER:

FREQUENCY	MAX.
GSM850	33 DBM ± 2 DB
EGSM900	33 DBM ± 2 DB
DCS1800	30 DBM ± 2 DB
PCS1900	30 DBM ± 2 DB
GSM850 (8-PSK)	27 DBM ± 3 DB
EGSM900 (8-PSK)	27 DBM ± 3 DB
DCS1800 (8-PSK)	26 DBM ± 3 DB
PCS1900 (8-PSK)	26 DBM ± 3 DB
UMTS 2100	24 DBM + 1,7/-3,7 DB
UMTS 1900	24 DBM + 1,7/-3,7 DB
UMTS 900	24 DBM + 1,7/-3,7 DB
UMTS 850	24 DBM + 1,7/-3,7 DB
UMTS 800	24 DBM + 1,7/-3,7 DB